

UV-5G MINI QUICK GUIDE

TWO CHANNELS – SIMPLE TO USE (DUAL WATCH IS OFF)

TOP BUTTON

A

A BUTTON

MAIN

= Channel 1
(462.562)

BOTTOM BUTTON

B

B BUTTON

BACKUP

= Channel 2
(462.587)



1 VOLUME / POWER KNOB

Turn clockwise to power ON. Continue turning to increase volume.

THE DISPLAY

TOP LINE (BRIGHT)
= Channel 1 (Main)
462.562
CH-001

BOTTOM LINE (DIM)
= Channel 2 (Backup)
462.587
CH-002

BRIGHT LINE
= Channel in use
Only one channel is active at a time.

FLASHLIGHT BUTTON
Press to turn the flashlight ON or OFF. Short press only.

HOW TO USE

1 SELECT CHANNEL
Press the A/B button to select the channel you want to use. The selected channel (bright line on display) is the one you will transmit on.

A/B BUTTON = SELECT CHANNEL

2 TRANSMIT (TALK)
Press and hold the correct side PTT button. Release to listen.

TOP BUTTON (A)
= Channel 1 (Main)
MAIN

BOTTOM BUTTON (B)
= Channel 2 (Backup)
BACKUP

3 LISTEN
Release the PTT button and listen for others to respond.

CHANNEL SUMMARY

A BUTTON (TOP)	= Channel 1 (Main)	= 462.562	= CH-001
B BUTTON (BOTTOM)	= Channel 2 (Backup)	= 462.587	= CH-002

Bright line = channel in use (only one at a time).

IMPORTANT

- Use the correct button for the channel you want to transmit on.
- Only one channel is active at a time.
- Do not press MENU or other buttons.
- Keep it simple. Use the right button.